TOKUYI®

User's Manual

Before Operating Your Tools,
Please Read These Instructions Carefully.

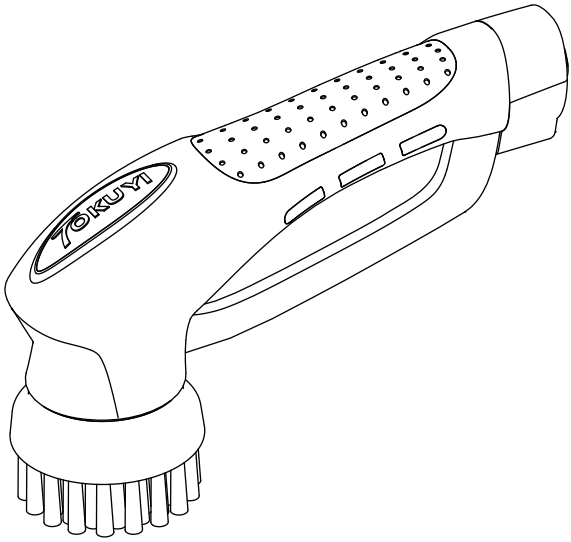

Handle Power Cleaner

IMPORTANT SAFEGUARDS

⚠ Warnning! To reduce the risk of fire, electrical shock or injury:

- Close supervision is necessary when any appliance is used by or near children. Do not allow to be used as a toy.
- Fix the brushes firmly before operation.
- To protect against risk of electrical shock, do not put battery charger in water or other liquids.
- Do not operate in the presence of explosives or flammable fumes or liquids.
- Always wear eye protection when using the scrubber with irritating substances. You may also use rubber gloves.
- Keep hair, loose clothing, and all parts of body away from moving parts.
- Do not insert attachments/accessories when unit is running.
- Do not put it under water without battery cover in place.

⚠ Important safety instructions for the battery, adapter, and charger.

- Do not store or carry battery so that metal objects can contact exposed metal end.
- Do not place battery in aprons, pockets, drawers, etc. with loose nails, screws, keys, etc. without protective battery cap. The battery could short circuit causing fire, personal injury, or damage to battery.
- Never attempt to open the battery for any reason. If the housing of the battery breaks or cracks, immediately discontinue use and do not recharge.
- Do not charge a battery if it is wet or shows any evidence of corrosion.
- keep away from heat, oil or flammable objects.
- Do not incinerate the battery. It can explode in a fire.
- Make sure the adapter matches with the standard socket, the voltage of the socket and electrical source must in line.
- This item equips with sepecialized rechargable battery and adapter.
- Never attempt to open the charger for any reason.
- Cut off the electricity before cleaning or maintaining it.
- Do not use the product near water or in a wet or damp place.
- Do not use the damaged wire and plug, if broken, should replaced immediately.
- Only use it indoor.
- Keep away from any hot, oil and sharp objects.

PRODUCTS & ACCESSORIES

Please check the product list before you use the unit.

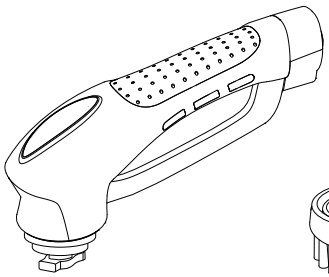

Body



3.6V Battery



Adapter

Battery Charger



Hard Brush



Crevice Cleaning Brush



Fine Brush

Scouring Pad

PRODUCT INTRODUCTION

Technology Background:
In the daily life, people usually need various kinds of cleaning equipment for easy-working, and time-efficiency, which give birth to our handle power cleaner.

Product Introduction:
The streamlined handle power cleaner includes four replaceable brushes, whose concave handle desisn is anti-slip and absolutely waterproof . The streamlined outlook, top-quality tightly-sealed water-proof material makes it safe when operating under water. The smart and portable handle power cleaner also matches the need for open air cleaning.

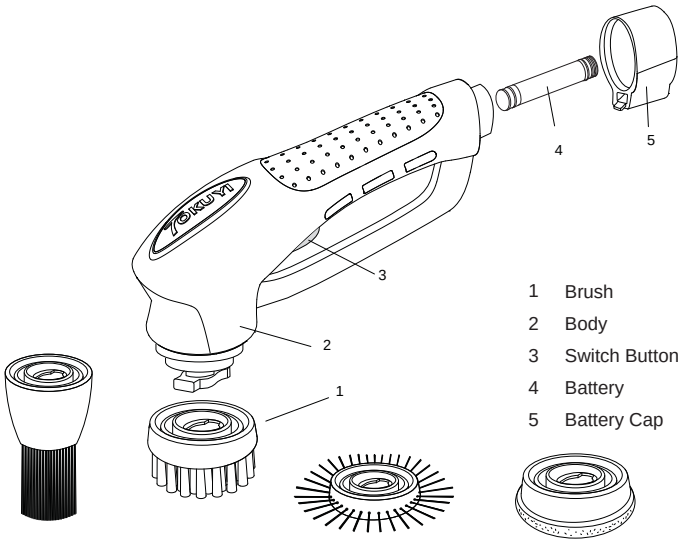

1 Brush
2 Body
3 Switch Button
4 Battery
5 Battery Cap

HOW TO USE

1. Fix the suitable brush firmly per your requirement.

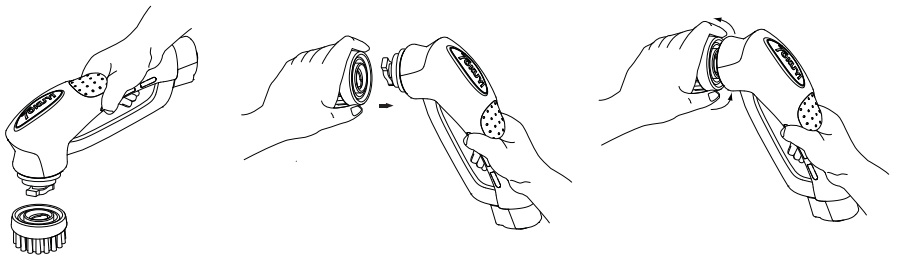

2. Open the battery cap on the bottom of the handle, put the battery , and put on the cap.

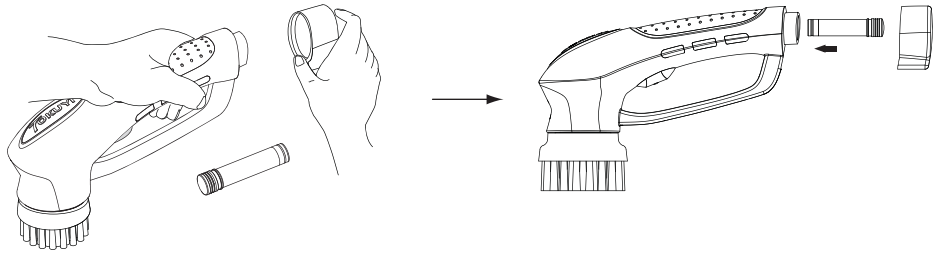

3. Push the button, then the scrubber starts to work.

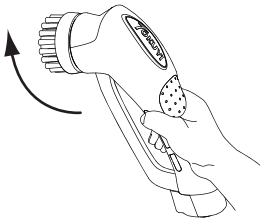

The function of the brushes

Equipped with different brushes, suitable to clean all kinds of cleaning work.

- Crevice Cleaning Brush -- powerfully clean grooves, corners, slits. Such as tiles & door slots.
- Hard Brush -- powerfully clean large objects, tile walls, floors, avant-garde glasses, hard plastic surface.
- Fine Brush -- suitable to clean slot, corners that usually difficult to clean; and some easily damaged surfaces.
- Scouring Pad -- suitable to clean large areas, such as ceramic tile, bathtub and sink etc.

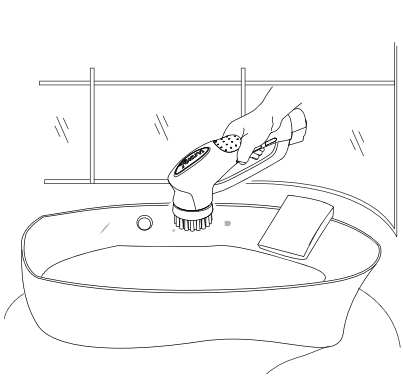

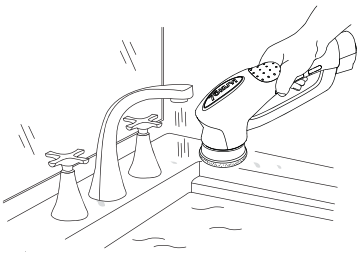

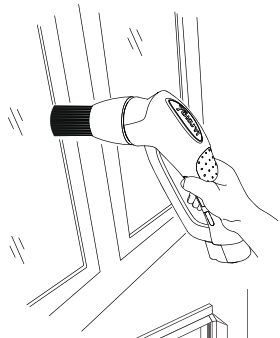

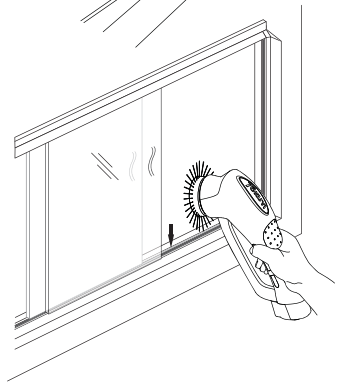

BATTERY & CHARGING

Battery & Charging:

This product uses Ni-CD or Ni-MH rechargeable and recyclable batteries which can be charged may times to give long life and repeatedly full power.

This symbol indicates the Ni-CD, Ni-MH batteries contained within this unit must be disposed of properly and not discarded in everyday household waste which may be disposed of in an incinerator or landfill site. The batteries can be harmful to the environment and can explode when exposed to fire. Do not incinerate or composted.

Battery

Adapter

Charger

With 3.6V battery (Ni-CD, 1.3Ah / Ni-MH, 2.1Ah) , input the battery in the groove of charger, and connect the adapter with the power. The battery must be chargered fully when it is chargered at the first time.

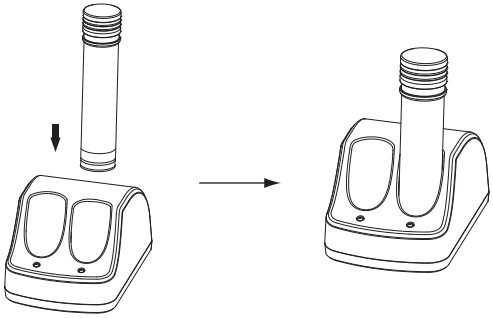

✸ 1.3Ah recharge time: 9-12 hrs, 2.1Ah battery recharge time: 14-19 hrs.

MAINTENANCE AND STORAGE

Clean the produces and accessories after use, to maintain functions and life.

1. With a mild detergent and soft sponge to clean it.
2. Maintain cleaning of surface to guarantee sealing ability.
3. Please put the product indoor.

Notes:

- Tokuyi policy is one of continuous improvement to our products, so we reserve the right to change product specifications without prior notice.
- Standard equipment and accessories may vary by country.

TOKUYI®